


3/4"  $\phi$  X 12" WEDGE ANCHOR BOLTS MIN 12" EMBEDMENT, TYP. COORDINATE BOLT LOCATIONS WITH PRE-DRILLED CABINET HOLES.

PLAN VIEW

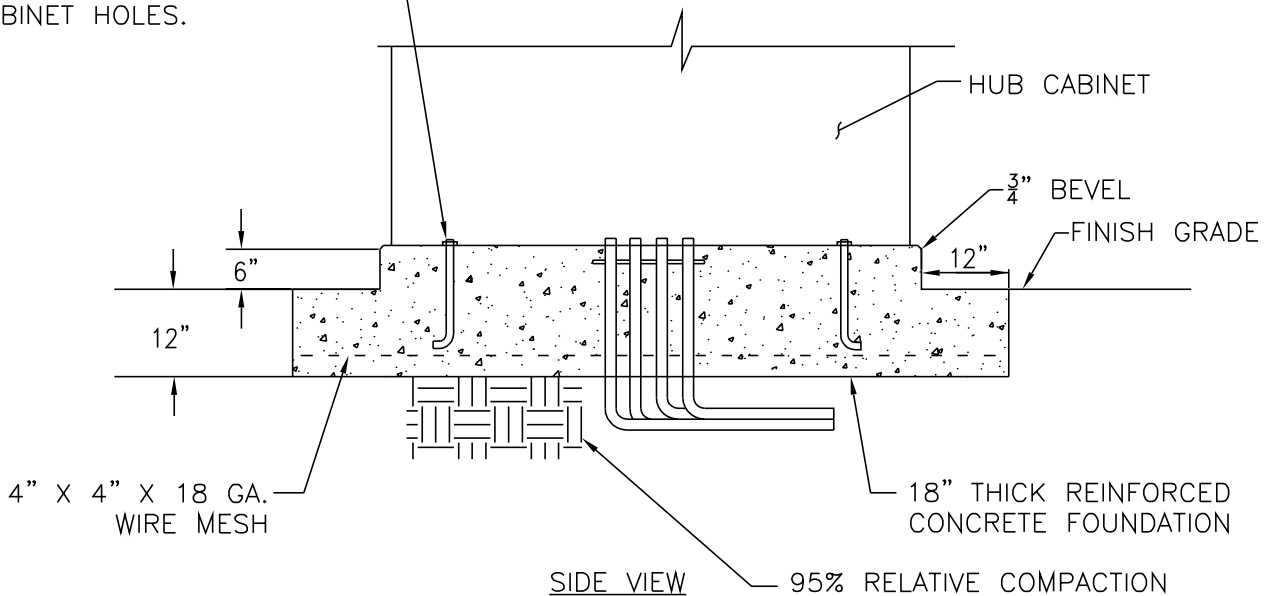

SIDE VIEW

NOTE:

THE CITY ENGINEER SHALL APPROVE FORMS AND CONDUIT PLACEMENT PRIOR TO PLACING CONCRETE.

# HUB CABINET FOUNDATION DETAIL

REF. & REV.  
FEB 08

CITY OF FRESNO  
ITS-23